

## Model #30020 Purge tank fitting kit instructions:



Male fitting with stepped adapter

Female fitting with 3/8" hose

Female fitting with 1/2" hose


Female fitting with 1" hose

For use with vehicles that do not have a cap on the radiator as pictured below


#1 Remove the hose from the purge tank (not uppermost overflow hose)



#2 Attach either the 3/8", 1/2" or 1" hose with female connector and clamp.

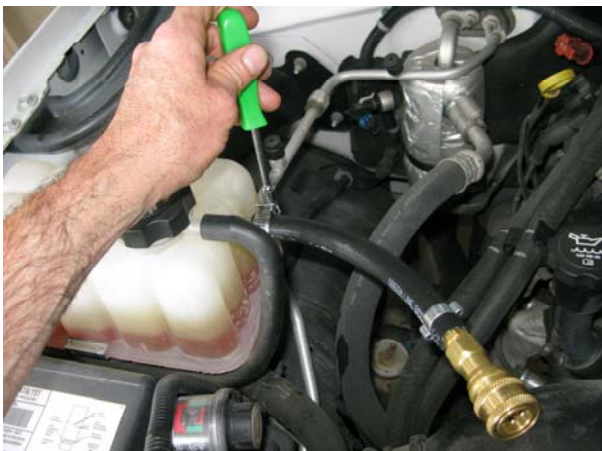

#3 Install stepped adapter into vehicle open hose and clamp.

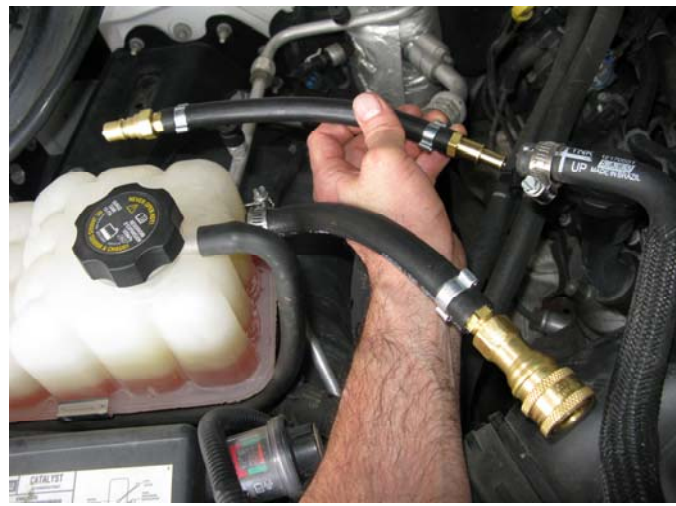

#4 You are now ready to connect your Cooling Flusher (it'll only connect one way) and start your flush

When the service is complete, turn the “Flush” switch off and allow pressure to purge before disconnecting the hoses.



1350 Parkinson Road Kelowna, B.C. Canada V1Z 3M6

Phone (250) 769-9351

Fax (250) 769-1643

[joeh@fluidservicetech.com](mailto:joeh@fluidservicetech.com)