




Specialty Fittings

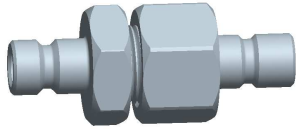


15021
Ford and Dodge

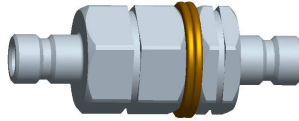

15022
Ford Escort, Mazda, Nissan,
Saab 900, 9000

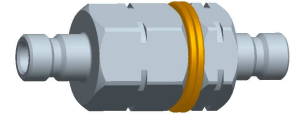


15023
Mazda and Ford

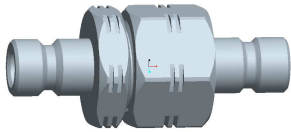


15024
Ford Contour, Mystique




15025
Dodge diesel (early)

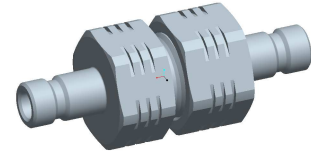


15026
BMW

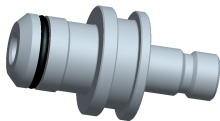


15027
Volvo (early)

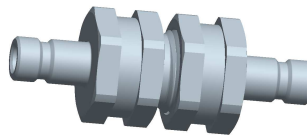


15028
BMW 500 Series




15029
Dodge Dakota,
Ford Windstar, Taurus

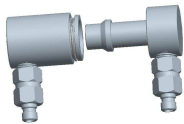


15038 (5/8")
GM/Chevy Trucks w/Allison
transmission

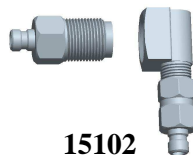


15102
Dodge diesel trucks
2002 – Mid 07




15103
Ford Super Duty 4R100
transmission Requires #
15051 Disconnect Tool

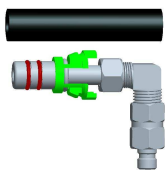


15113
Volvo quick connect
1999 on

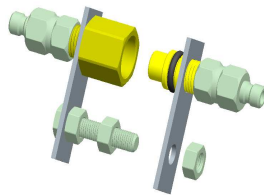


15114
Audi A8, 2000 on

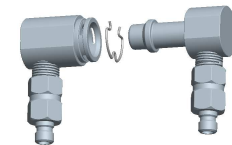


15115 (1/2")
Dodge Diesel mid 2007 and on

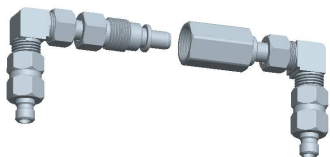

15116
O Ring Adaptor Assembly
Dodge Dakota

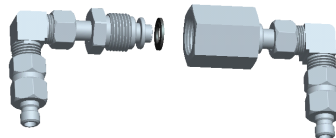

15117
Saturn Ion

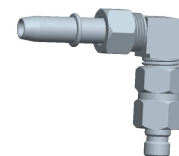

15118
Ford Focus